



BERDICK
WINDOWS & DOORS

Dual Action Tilt + Turn Window Adjustment Instructions

Use a 4mm L key on the stay arm like shown in the picture to adjust the sash left - right on the top of the window



Up - down adjustment of sash at bottom of hinge



Left - right adjustment of the sash at the bottom of the window

